

# DRIVE▶RITE

## AIR SUSPENSION SYSTEMS

Unit 626 Kilshane Avenue, North West Business Park, Ballycoolin, Dublin 15, Ireland

Telephone: +353 1 8612 632 Fax: +353 1 8612 647 email: [info@driveriteair.com](mailto:info@driveriteair.com)

Web: [www.driveriteair.com](http://www.driveriteair.com)

### **DR.02.013117 Metric**

*W21-760-3117 Metric*

**RENAULT MASTER / NISSAN INTERSTAR**

**OPEL & VAUXHALL MOVANO**

**REAR WHEEL DRIVE**

**ABS Vehicles only**

### **INSTALLATION INSTRUCTIONS**



# Table of Contents

<b>Table of Contents</b> .....	<b>2</b>
<b>Introduction</b> .....	<b>3</b>
IMPORTANT SAFETY NOTICE .....	3
Special Instructions for Air Connections.....	3
<b>Kit Contents</b> .....	<b>4</b>
DIAGRAM .....	4
HARDWARE LIST .....	5
<b>Step by Step Installation</b> .....	<b>6</b>
Step 1: Remove the Bump Stop.....	6
Step 2: Upper Bracket to Chassis.....	6
Step 3: Prepare the Air Spring Assembly .....	7
Step 4: Air Spring Assembly to Vehicle .....	7
Step 5: Secure Lower Bracket to Axle.....	8
Step 6: Routing the Air Tubing .....	9
Step 7: Imperial to Metric Adapter Kit .....	10
<b>Notes</b> .....	<b>10</b>

# Introduction

The purpose of this publication is to assist with the installation of this Drive-Rite Semi-air kit.

It is important to read and understand the entire installation guide before beginning installation or performing any maintenance, service or repair. The information here includes a hardware list and step-by-step installation information.

Drive-Rite reserves the right to make changes and improvements to its products and publications at any time. Contact Drive-Rite at +353 1 8612 632 or visit us online at [www.driveriteair.com](http://www.driveriteair.com) for the latest version of this manual.

## IMPORTANT SAFETY NOTICE

The installation of this kit does not alter the Gross Vehicle Weight Rating (GVWR) or payload of the vehicle. Check your vehicle's owner's manual and do not exceed the maximum load listed for your vehicle.

**Gross Vehicle Weight Rating** = the maximum allowable weight of the fully loaded vehicle (including passengers and cargo). This number — along with other weight limits, as well as tire, rim size and inflation pressure data — is shown on the vehicle's Safety Compliance Certification Label.

**Payload:** The combined, maximum allowable weight of cargo and passengers that the truck is designed to carry. Payload is GVWR minus the Base Curb Weight.

### Precautions

Never exceed the maximum and minimum recommended pressure limits:

- Minimum Pressure            1 Bar (14.5 p.s.i)
- Maximum Pressure           7 Bar (100 p.s.i)

### **NEVER DRIVE WITH DEFLATED AIR SPRINGS**

## Special Instructions for Air Connections

- To cut the tubing correctly an appropriate cutter must be used (not scissors)






 
- When inserting the tubing into the connection, it must be pushed in approximately 14mm until a 'click' is heard.
- To remove the tube, you must push the flange in on the connection and at the same time pull the tube. (No tool is necessary.)
- **ATTENTION**, when a tube is removed it is important to trim 14mm from the end before reconnection.
- It is advisable that LOCTITE or similar sealant be used on the threaded fittings.

## Kit Contents

## DIAGRAM



## **HARDWARE LIST**

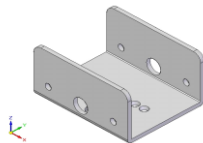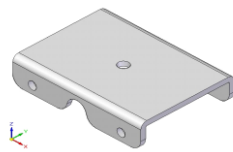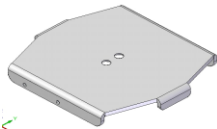Part Name	Quantity	Picture/Description	Part #
Upper Outer Bracket	2		DRV-7380
Upper Inner Bracket	2		DRV-7381
Lower Bracket	2		DRV-7382
Clamp	4		DRV-7383
M6 x 10 Countersunk Bolts	8	Lower Bracket to Clamp	
M10 x 20 Hex Head Bolt	2	Upper Inner Bracket	
M10 Spring Washer	2	M10 Hex Bolt	
M8 x 120 Hex Head Bolt	4	Upper Outer to Inner	
M8 Nyloc Nuts	4	M8 x 120 bolts	
M8 Flat Washers	12	M8 Bolts & Inflation valves	
Cable Ties	10		
3/8 x 3/4 c'sk Bolt	2	Lower Bracket to Air spring	
Thermal Sleeves	2		0899
Air Spring	2		6781
6mm Tubing	5		1321-1M
3/8 x 3/4 Flange Nuts	4	Upper Outer to Air spring	3022
1/4"-6mm Elbow	2		3047
6mm Inflation valve	2		0155
6mm Tee piece	1		3703
6mm Compression Joiner	2	6mm Tubing to 1/4" Tubing	0190

**Please note that the Compression Joiners are only needed if a Control kit with 1/4" tubing is also being installed. Please retain the joiners for the future if you intend to install a control kit.**

# Step by Step Installation

## ↘ Step 1: Remove the Bump Stop

Remove the rubber bump stop by pulling the rubber bumper away from the metal plate.

This will reveal an M10 bolt. Remove this bolt and the bump stop bracket.

This hole will be used to fix the upper bracket to the chassis.



## ↘ Step 2: Upper Bracket to Chassis

Using the M10 countersunk bolt fix the upper bracket to the threaded hole that was originally used to hold the bump stop receiver in place. **Ensure the bracket is running parallel with the chassis**, as indicated on the picture on the right.

**Torque the M10 bolt to approx. 40Nm.**

*Note that this particular style bag acts as a bump stop when deflated. So in the unlikely event that there is a leak in the air spring the top and bottom bracket cannot touch as the air spring rubber folds in on itself.*





### Step 3: Prepare the Air Spring Assembly

Insert the 6mm elbow into the air spring and bolt the Upper Outer Bracket to the air spring using the 3/8" UNC flange nuts.

**Torque to approx 22Nm.**


There are 2 countersunk holes in the lower bracket. Use the hole that is facing closest to the front of the vehicle (Outlined by the triangle).

Note that the M6 threaded holes (Outlined by the square) face inboard.

Assemble the air spring to the lower bracket using the 3/8" UNC x 3/4" countersunk bolt.

**Torque to approx. 27Nm.**

Note that the narrowest flange (Circled) of the Lower Bracket **must** be facing in the same direction as the axle.

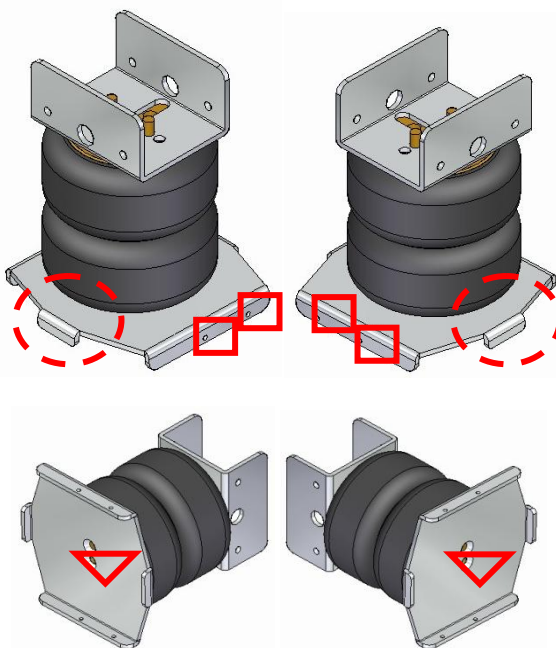

### Step 4: Air Spring Assembly to Vehicle


Compress the assembly and place the Lower Bracket on the bump stop receiver plate with the M6 holes (Circled) running in the same direction as the chassis.

Allow the assembly to extend so that the 4 holes in the Upper *Outer* Bracket align with the corresponding 4 holes on the Upper *Inner* Bracket.




Bolt the Upper Inner Bracket to the Upper Outer Bracket using the M8x1.25-120mm bolts, M8 flat washers and nyloc nuts.

Torque to approx. 22Nm.

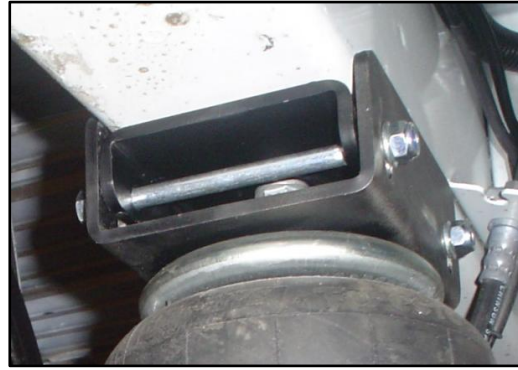

### Step 5: Secure Lower Bracket to Axle

There are 2x M6 holes on the front and rear of the Lower Bracket (Circled). These will be used to clamp the lower bracket to the bump stop receiver plate.

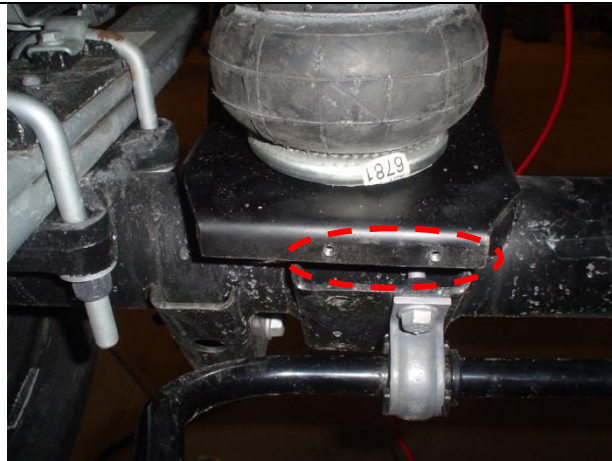

Align the holes on the clamp with the M6 holes on the lower bracket. The narrow flange should be facing in line with the axle. Bolt the clamp to the lower bracket using the M6 countersunk bolts.

**Torque to approx. 13Nm**

*Note: Check that there is at least **15mm** clearance around the air spring when inflated. If not adjust accordingly*





## Step 6: Routing the Air Tubing

Cut a long length of tubing in order to connect the valve to the nearest air spring. Do the same for the opposite side. Choose whether you want separate inflation valves for each side or one valve common to both sides using the T shaped connector. Use the nylon ties provided to tie the tubing up into a safe position.




When cutting the air tube, it is vital that the tube is not cut at an angle. This could cause an air leak. It is recommended that a tube cutter or a sharp blade.



Drill an 8mm (5/16") hole and mount the inflation valve as shown in the diagram, pushing the valve through the hole from behind and attaching with 2 washers and a nut.

Cut the air tube to length, making sure the end is cut squarely, and push the end as far as possible into the back of the inflation valve.

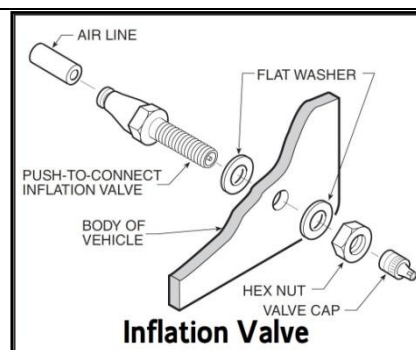

### IMPORTANT:

- Attach all tubing securely to the underneath of the vehicle using nylon ties.
- Do not attach to brake lines.
- Protect the tube with the sleeves provided where there are any sharp edges or sources of heat.
- Tighten all fittings to the recommended torque

### Examination:

After assembly, inflate air springs and check all mounting bolts are tight. Screw all connections tight again. It must be ensured that the mounting brackets cannot move. If the plates touch the brake hose at the air springs, then these must be moved by suitable means.

## Step 7: Imperial to Metric Adapter Kit


This kit is supplied with metric air fittings. Please follow the procedures outlined in this document if combining a metric air spring kit with an imperial compressor and gauge kit (Control kit).

**Do not attempt to connect imperial fittings to metric tubing (or vice versa) as leaks will occur.**

The air springs should be connected to the control kit using the supplied Compression Joiners.

1. Unscrew the two caps off the air fitting adaptor.
2. Insert the cap over the 6mm and 1/4" tubing.
3. Force the tubing over the air fitting collar. Ensure the tubing is fully inserted over the collar.  
*-Do not use a flame to soften the tubing as this can damage it and cause leaks.*

### 1/4" Imperial Tubing

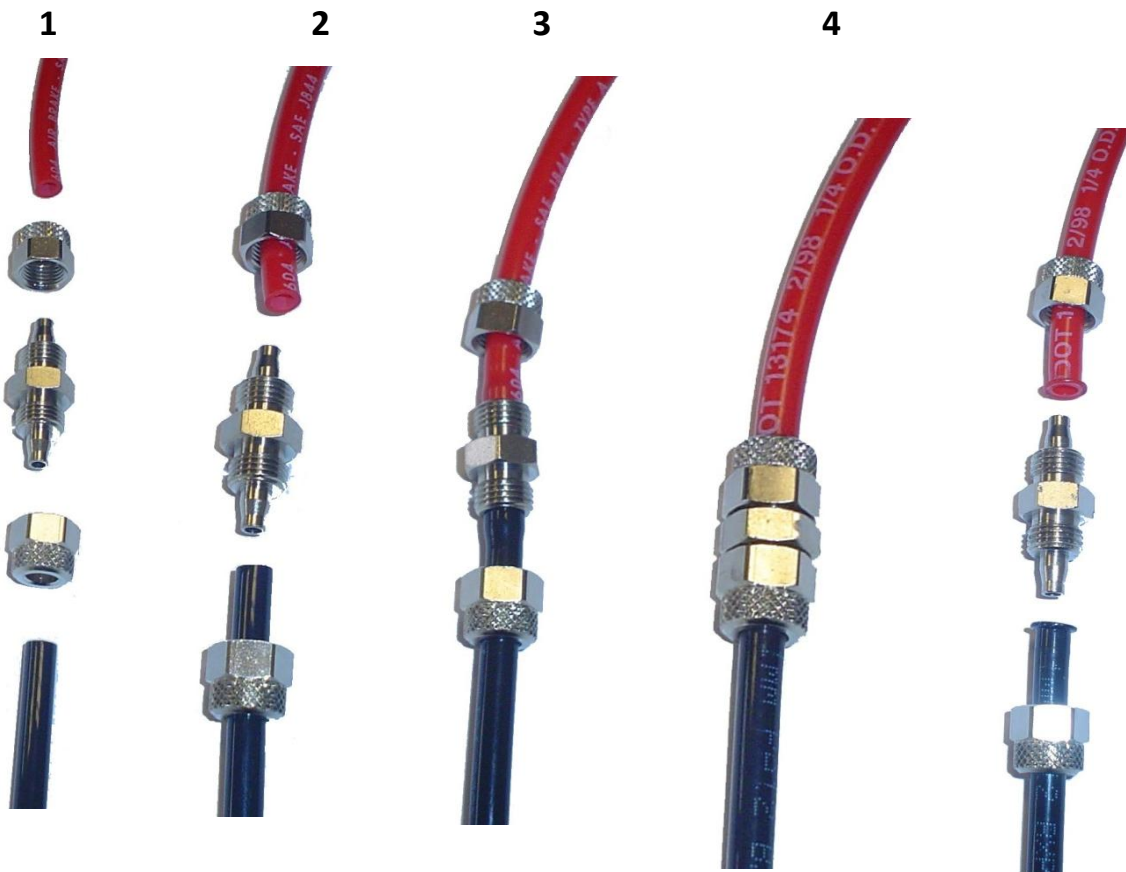

### 6mm Metric Tubing

## Notes

[illegible]



**DRIVE RITE**

**AIR SUSPENSION SYSTEMS**

Unit 626 Kilshane Avenue, North West Business Park, Ballycoolin, Dublin 15, Ireland

Telephone: +353 1 8612 632 Fax: +353 1 8612 647 email: [info@driveriteair.com](mailto:info@driveriteair.com)

Web: [www.driveriteair.com](http://www.driveriteair.com)