

DRIVE▶RITE

AIR SUSPENSION SYSTEMS

Unit 626 Kilshane Avenue, North West Business Park, Ballycoolin, Dublin 15, Ireland

Telephone: +353 1 8612 632 Fax: +353 1 8612 647 email: info@driveriteair.com





Web: www.driveriteair.com

DR.17.013148

W21-760-3148


X70 LOAD SENSING VALVE KIT

INSTALLATION INSTRUCTIONS

Step	Image	Tool needed	Notes.
Unbolt the LSV operating arm from the centre of the axle and remove the complete arm by pulling out the spring end.		Spanner 13 mm	VEHICLES WITHOUT ABS ONLY
Measure the exact length of this unit.		Measuring tape	
Undo the adjusting screw and remove the lower end of the unit.		Adjustable spanner	Rotating the spindle will assist removal.
Using the original adjusting screw, reassemble the unit to the original length with the LSV assembly (15). Make sure the cylinder is closed.		Measuring tape Adjustable spanner	

Cut the air line from the Air Springs and attach the LSV using a Tee piece.		Tube Cutter	
Replace the unit on the vehicle using bolt, washer and nut also clamping control rod bracket.		13 mm spanner	VEHICLES WITHOUT ABS ONLY

AIR CIRCUIT

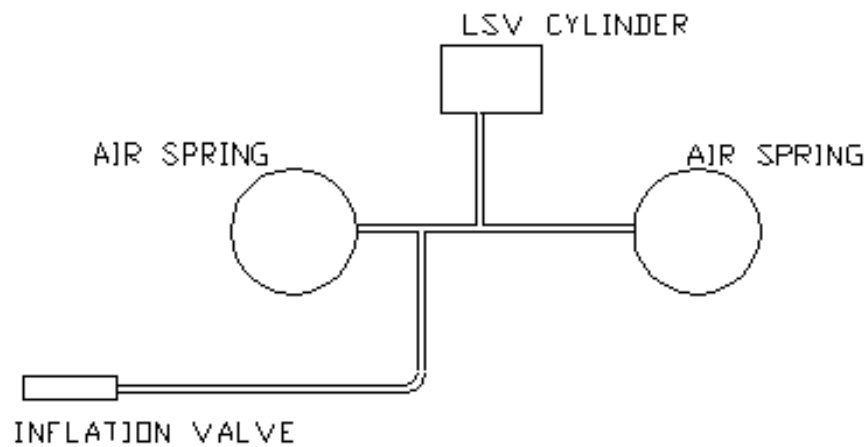

NB: When the Air Suspension Kit is fitted along with the LSV Kit it is important to check the brakes with a *laden* and *un-laden* vehicle to ensure that they operate as per the recommended vehicle specifications.

For further information please contact Driverite for further details.