

DRIVE▶RITE

AIR SUSPENSION SYSTEMS

Unit 626 Kilshane Avenue, North West Business Park, Ballycoolin, Dublin 15, Ireland

Telephone: +353 1 8612 632 Fax: +353 1 8612 647 email: info@driveriteair.com

Web: www.driveriteair.com

DR.02.012426

FIAT DUCATO

PEUGEOT BOXER

CITROËN JUMPER / RELAY

X250 CHASSIS KIT, ABS Vehicles Only

INSTALLATION INSTRUCTIONS

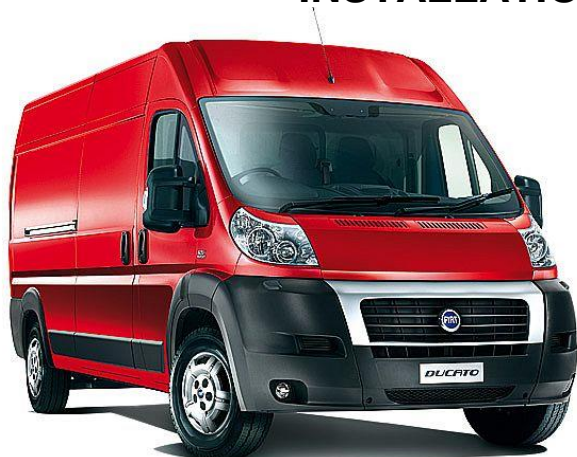


Table of Contents

Table of Contents.....	2
Introduction	3
IMPORTANT SAFETY NOTICE.....	3
Special Instructions for Air Connections.....	3
Kit Contents.....	4
HARDWARE LIST.....	4
Step by Step Installation	5
Step 1: Prepare the Air Spring assembly – Lower Bracket.....	5
Step 2: Prepare the Vehicle	6
Step 3: Mount the Upper Chassis Bracket to the Vehicle.....	7
Step 4: Prepare the Air Spring assembly.....	7
4a: Anti-Roll Bar	8
4b: No Anti-Roll Bar	8
Step 5: Install the Air Spring Assembly to the Chassis	9
Step 6: Air Spring Assembly to Axle	10
6a: Anti-Roll Bar	11
6b: No Anti-Roll Bar	12
Step 5: Install the Air Spring Assembly to the Leaf Spring	Error! Bookmark not defined.
Step 6: Routing the Air Tubing.....	15
Notes.....	Error! Bookmark not defined.
Notes.....	Error! Bookmark not defined.

Introduction

The purpose of this publication is to assist with the installation of the DR.02.012426 kit.

It is important to read and understand the entire installation guide before beginning installation or performing any maintenance, service or repair. The information here includes a hardware list and step-by-step installation information.

Drive-Rite reserves the right to make changes and improvements to its products and publications at any time. Contact Drive-Rite at +353 1 8612 632 or visit us online at www.driveriteair.com for the latest version of this manual.

IMPORTANT SAFETY NOTICE

The installation of this kit does not alter the Gross Vehicle Weight Rating (GVWR) or payload of the vehicle. Check your vehicle's owner's manual and do not exceed the maximum load listed for your vehicle.

Gross Vehicle Weight Rating = the maximum allowable weight of the fully loaded vehicle (including passengers and cargo). This number — along with other weight limits, as well as tyre, rim size and inflation pressure data — is shown on the vehicle's Safety Compliance Certification Label.

Payload: The combined, maximum allowable weight of cargo and passengers that the truck is designed to carry. Payload is GVWR minus the Base Curb Weight.

Precautions

Never exceed the maximum and minimum recommended pressure limits:

- Minimum Pressure 1 Bar (14.5 p.s.i.)
- Maximum Pressure 7 Bar (100 p.s.i.)

While it is possible to inflate the system in static mode to 7 Bar (100 p.s.i.), it should not be necessary to exceed operating pressure in the region of 3.5 Bar (50 p.s.i.) at vehicle full GVW. This kit should not be used to carry any greater load than manufacturers stated GVW.

NEVER DRIVE WITH DEFLATED AIR SPRINGS

Special Instructions for Air Connections




- To cut the tubing correctly an appropriate cutter must be used (not scissors)



- When inserting the tubing into the connection, it must be pushed in approximately 14mm until a 'click' is heard.
- To remove the tube, you must push the flange in on the connection and at the same time pull the tube. (No tool is necessary.)
- **ATTENTION**, when a tube is removed it is important to trim 14mm from the end before reconnection.
- It is advisable that LOCTITE or similar sealant be used on the threaded fittings.

Kit Contents

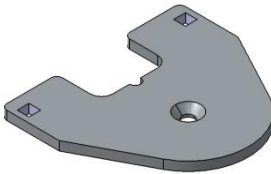▼ HARDWARE LIST

Name	Quantity	Picture/Description	Part #
Upper Chassis Bracket	2		DRV-7511
Upper Air Spring Bracket	2		DRV-7510
Lower air Spring Bracket	2		DRV-7509
Airspring	2	Style 26 Metric Air Spring	6693
Air Tubing	5m	6mm tubing	1364-1MR
Thermal Sleeve	2		0899
Nylon Tie Strap	15	Cable Ties	9037
M10x1.5x30 Coach Bolt	4	Upper chassis brkt to air spring brkt	3900
M10 Nyloc Nut	4	For M10x1.5x30mm bolts	0034
M10 Flat washer	8	For M10x1.5x30mm bolts For M10x1.5x20mm bolts	0079
M10x1.25-30 Countersunk Bolt	2	Upper Bracket to Chassis	2530
M14 Nyloc Nuts	8	U-Bolt nut replacements	3847
M14 Flat Washer	8	For U-bolts	0134
M10x1.5x20 Hex Head Bolt	4	Air Spring to Lower Bracket	3813
M10x1.5x20 Countersunk Bolt	4	Air Spring to Upper Bracket	3845
1/4" to 6mm Elbow Fitting	2		3614
6mm Inflation Valve	2	PTC or Compression	3660/3151
6mm T-Piece	1		3666
Compression Joiner	2		190

Step by Step Installation

➤ Step 1: Prepare the Air Spring assembly – Lower Bracket

Install the swivel elbow in the air inlet hole on the top plate of the air springs.

It is recommended that a sealant is used when attaching the elbow.




Fasten the Air Spring to the Lower Bracket. Use the M10x1.5-20mm Hex bolts and washers provided. (Torque to approx. 38Nm).



Step 2: Prepare the Vehicle

The vehicle is equipped with a rubber bump stop which is positioned on the frame directly above the axle. Remove this bump stop together with the metal bump stop cup and discard.

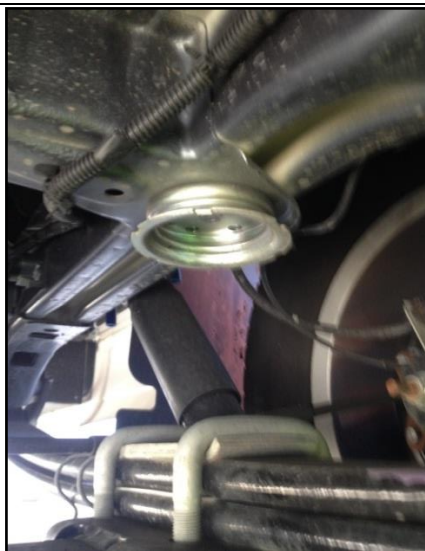

Please note that some bump stop cups will need to be rotated out of position.

This hole will be used to secure the Upper Chassis Bracket into position



Step 3: Mount the Upper Chassis Bracket to the Vehicle

Mount the Upper Chassis Bracket onto the vehicle using the fine thread M10x1.25-30mm countersunk bolt provided.

(Torque to approx.. 50Nm)

Ensure that it is sitting flat against the chassis.



Step 4: Prepare the Air Spring assembly

For vehicles fitted with an anti-roll, the air spring assembly needs to be turned to allow it to be mounted inboard.

The pictures on the right show how the anti-roll bar is in close proximity to the air spring.

If the assembly is in such close proximity this means it will have to be mounted differently.



↘ 4a: Anti-Roll Bar

If an anti-roll bar is present on the vehicle the Upper Air spring Bracket bracket should be mounted to the airspring as per the picture.

Torque to approx. 50N.m



↘ 4b: No Anti-Roll Bar

If there is no anti-roll bar present on the vehicle the air spring should be mounted to the Upper Air Spring Bracket as per the picture.

Torque to approx. 50N.m






Step 5: Install the Air Spring Assembly to the Chassis

Place the air spring assembly into position on the Leaf Springs.

The 'bend' in Upper Air Spring Bracket sits onto the flange on the chassis.

It may be easier to rotate the bracket into position as seen in the image.

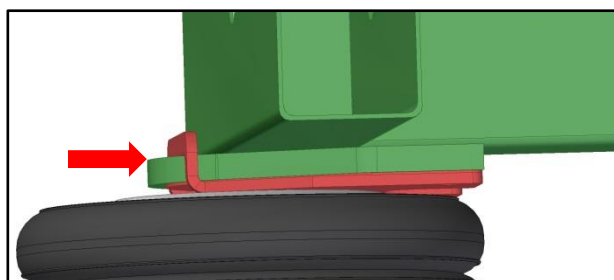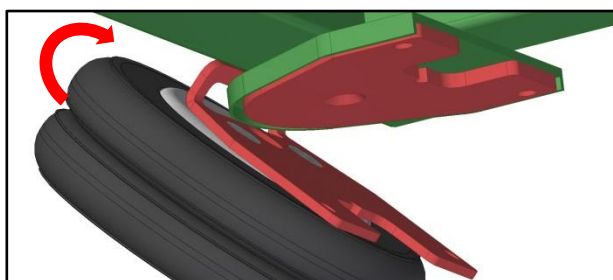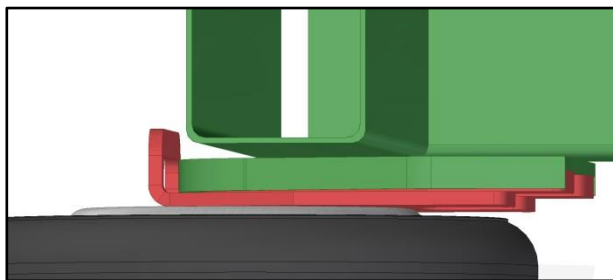

Bolt the upper air spring bracket to the Upper Chassis Bracket with the M10x1.5-30mm coach bolts, flat washers and nyloc nuts provided.

(Torque to approx. 38Nm).



Step 6: Air Spring Assembly to Axle

Remove the U-Bolts from the vehicle's axle. Retain U-Bolts for re use and discard the M14 nuts.

The Lower Bracket must sit under the U-bolts.

Remove the M14 nuts holding the U-Bolts and discard the nuts. The U-Bolts will be used with new nyloc nuts.


Remove and discard the original saddle piece.



Position the assembly on top of the leaf and install the new saddle between the U-Bolts.

Ensure that the U-Bolts are sitting correctly over the lower bracket.

Use the supplied M14 Nyloc nuts to tighten the U-bolts back into place.

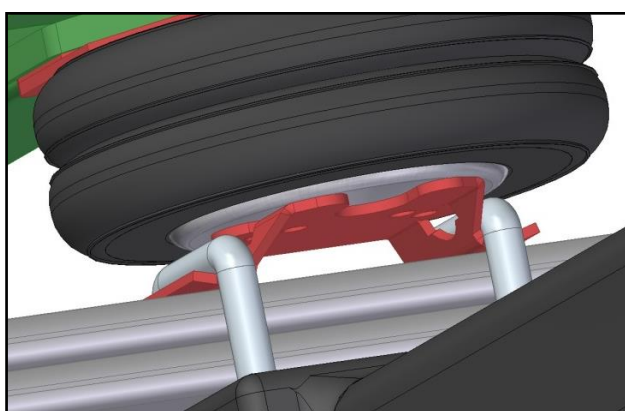



6a: Anti-Roll Bar

If the vehicle is fitted with an anti-roll bar, the air spring should be mounted to the Upper Bracket as per - *Step 4a: Anti-Roll Bar*.

Replace the U-Bolts and secure in place using M14 nyloc nuts provided.

The lower bracket is mounted on the leaf spring with the tabs facing inboard.

Torque U-Bolts to approx. 140N.m

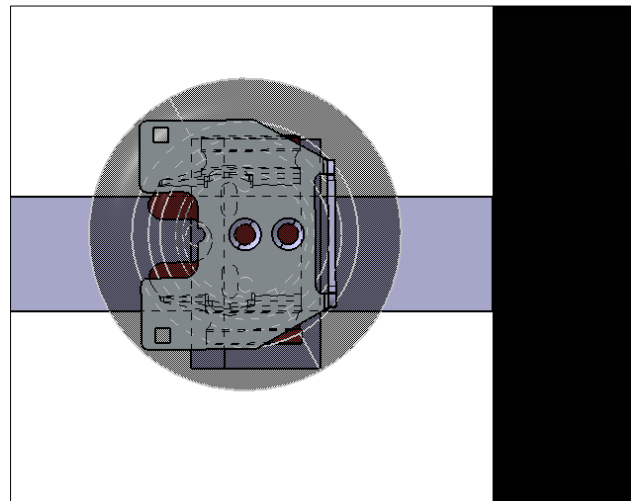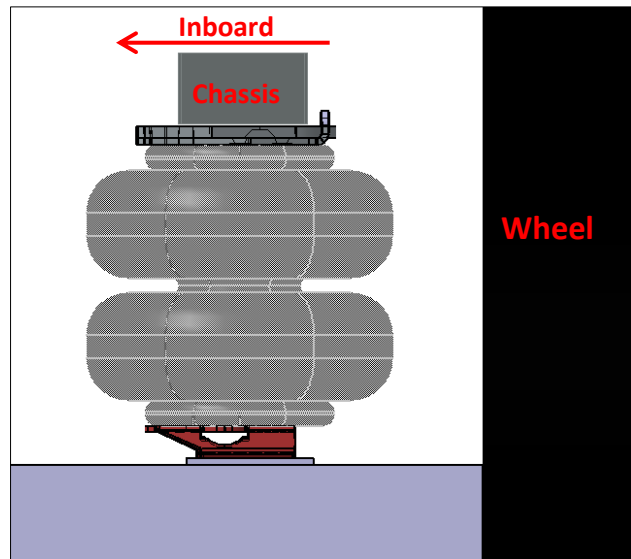



6b: No Anti-Roll Bar

If the vehicle is fitted with an anti-roll bar, the air spring should be mounted to the Upper Bracket as per - *Step 4b: No Anti-Roll Bar*.



Replace the U –Bolts and secure in place using M14 Nyloc Nuts provided.

The lower bracket is mounted on the leaf spring with the tabs facing outboard.

Torque U-Bolts to approx. 140N.m

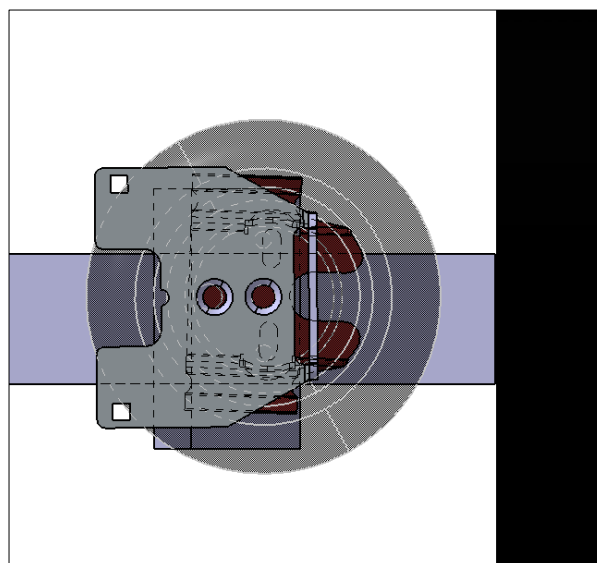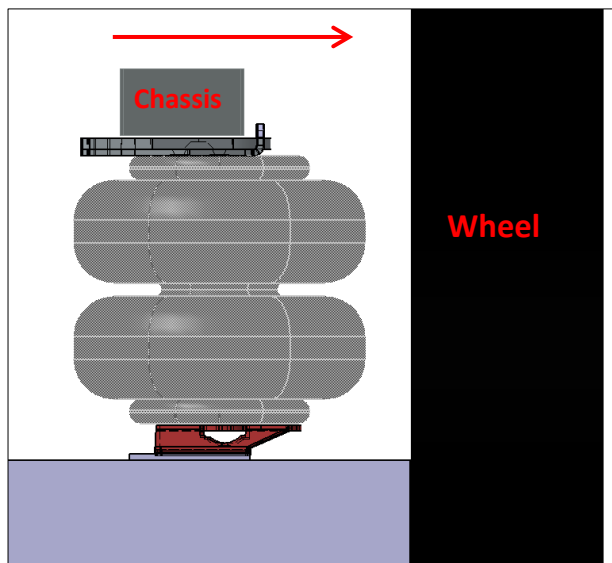

Please ensure that there is an equal amount of thread showing before and after using the torque wrench

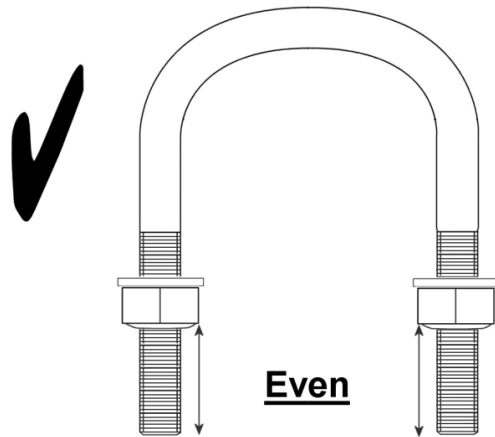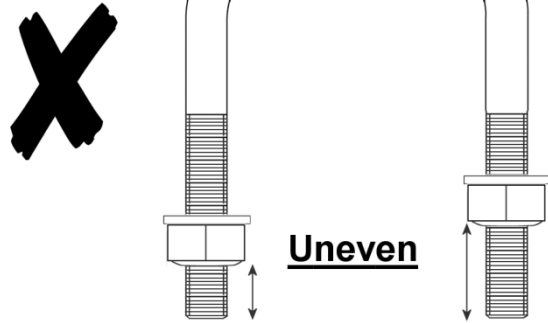


Step 7: Brake Line

In some versions of this vehicle there is a brake sensor bracket present.

- This bracket will need to be bent to ensure it sits above the top line of air spring top plate (red line).
- You will need to re-secure sensor cables & ensure no risk of cable damage during vehicle movement.
- Bending this bracket is required to stop risk of damaging air spring during use.
- If you do not wish to bend brackets, an additional air spring spacer kit is available.



Bracket sit above red line

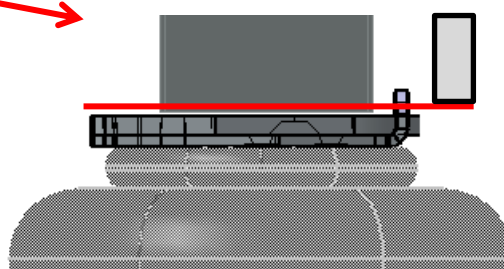

Step 8: Routing the Air Tubing

Cut a long length of tubing in order to connect the valve to the nearest air spring. Do the same for the opposite side. Choose whether you want separate inflation valves for each side or one valve common to both sides using the T shaped connector. Use the nylon ties provided to tie the tubing up into a safe position.

Note: Inflation valves may be Push-to-Connect type or compression-type.




When cutting the air tube, it is vital that the tube is not cut at an angle. This could cause an air leak. It is recommended that a tube cutter or a sharp blade.



Drill an 8mm (5/16") hole and mount the inflation valve as shown in the diagram, pushing the valve through the hole from behind and attaching with 2 washers and a nut.

Cut the air tube to length, making sure the end is cut squarely, and push the end as far as possible into the back of the inflation valve.

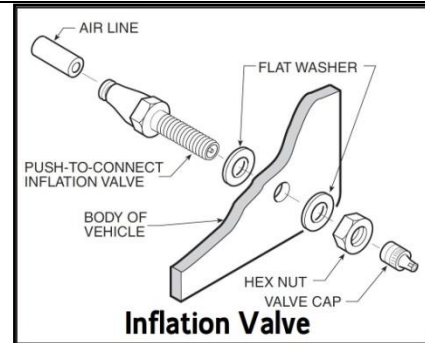

IMPORTANT:

- Attach all tubing securely to the underneath of the vehicle using nylon ties.
- Do not attach to brake lines.
- Protect the tube with the sleeves provided where there are any sharp edges or sources of heat.
- Ensure that all fittings are correctly torqued.

Examination:

After assembly, inflate air springs and check all mounting bolts are tight. Screw all connections tight again. It must be ensured that the mounting brackets cannot move. If the plates touch the brake hose at the air springs, then these must be moved by suitable means.



TÜV SÜD AUTOMOTIVE GMBH
Westendstrasse 199
D-80686 München



Teilgutachten Nr.: 11-00595-CX-GBM-00
Hersteller: DRIVERITE Ltd
Typ: DRIVERITE (250)

Seite 1 von 11

TEILEGUTACHTEN

Nr. 11-00595-CX-GBM-00
TGA-Art: 8.1

über die Vorschriftsmäßigkeit eines Fahrzeuges bei bestimmungsgemäßem Ein- oder Anbau von Teilen gemäß § 19 Abs. 3 Nr. 4 StVZO

für das Teil / den Änderungsumfang : Zusatzaufhängungssystem für die Hinterachse

vom Typ : DRIVERITE (250)

des Herstellers : DRIVERITE Ltd.
Unit 626 Kilshane Avenue
Dublin 15 Irland

für das Fahrzeug : Fiat Ducato / Citroen Jumper / Peugeot Boxer (X250)

0. Hinweise für den Fahrzeughalter

Unverzügliche Durchführung und Bestätigung der Änderungsabnahme:

Durch die vorgenommene Änderung erlischt die Betriebserlaubnis des Fahrzeuges, wenn nicht unverzüglich die gemäß StVZO § 19 Abs. 3 vorgeschriebene Änderungsabnahme durchgeführt und bestätigt wird oder festgelegte Auflagen nicht eingehalten werden!

Nach der Durchführung der technischen Änderung ist das Fahrzeug unter Vorlage des vorliegenden Teilgutachtens unverzüglich einem amtlich anerkannten Sachverständigen oder Prüfer einer Technischen Prüfstelle oder einem Prüfsachverständigen einer amtlich anerkannten Überwachungsorganisation zur Durchführung und Bestätigung der vorgeschriebenen Änderungsabnahme vorzuführen.

Einhaltung von Hinweisen und Auflagen:

Die unter III. und IV. aufgeführten Hinweise und Auflagen sind dabei zu beachten

TÜV Certificate Available, contact Drive-Rite for details

DRIVE RITE

AIR SUSPENSION SYSTEMS

Unit 626 Kilshane Avenue, North West Business Park, Ballycoolin, Dublin 15, Ireland

Telephone: +353 1 8612 632 Fax: +353 1 8612 647 email: info@driveriteair.com

Web: www.driveriteair.com